



FIXING INSTRUCTIONS

UNIVERSAL IN LINE TILE VENTILATOR


FLAT INTERLOCKING TYPE

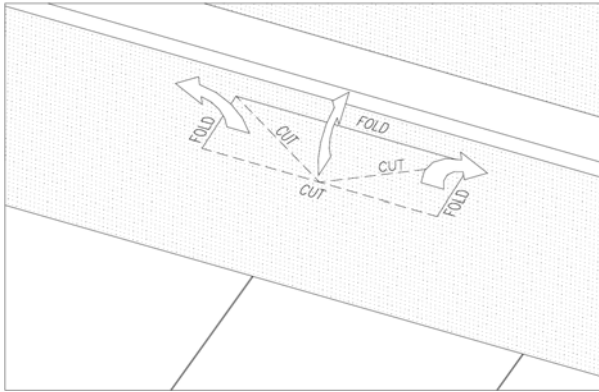

1 - Determine the position for the ventilator between rafters. Just below the batten, cut and fold the underlay as shown to accept the throat of the ventilator. Ensure that cuts in the underlay do not extend beyond the sides of the throat.

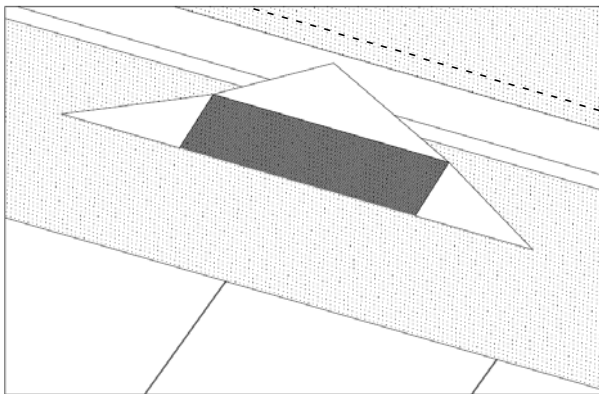

2 - Ensure that the top and lower flaps of the underlay are on the upper surface of the underlay just above the batten. Cut a 340mm long slot in the underlay to accept the underlay protector which should pass under the batten and into the slot. This needs to be done prior to locating the ventilator.

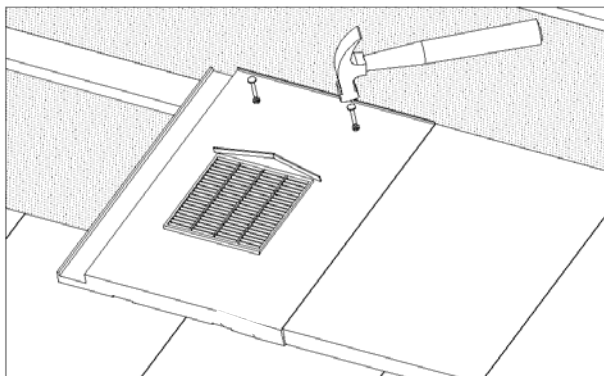

3 - Place the throat of the ventilator through the underlay aperture and ensure that all moulded interlocks and integral clips are engaged with the adjacent tiles before nailing the ventilator in place.

Continue tiling as normal.

.....

GLIDEVALE

2 Brooklands Road, Sale, Cheshire, M33 3SS

Telephone: (+44) 0161 905 5700 Fax: (+44) 0161 905 2085 Web: www.glidevale.com Email: info@glidevale.com



A division of Building Product Design Ltd. Company Registration No: 3944123